



1840955

Richmond Computer Return

Parts List

A.	Top Assembly	1 pc
B.	CPU Cabinet Assembly	1 pc
C.	Fastening Screw Set	3 sets
D.	Short Allen Head Bolt	4 pcs
E.	Spindle	2 pcs
F.	Base	1 pc
G.	Long Allen Head Bolt	2 pcs
H.	Lock Washer	6 pcs
I.	Flat Washer	6 pcs
J.	Adjustable Shelf	1 pc
K.	Shelf Support Pin	4 pcs
L.	Allen Head Wrench	1 pc


- * Please make sure that you have all the parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.




1840955

Richmond Computer Return


Hardware Illustrations




D. Short Allen Head Bolt

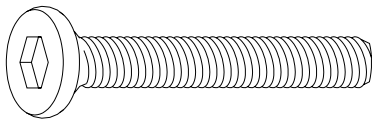


G. Long Allen Head Bolt

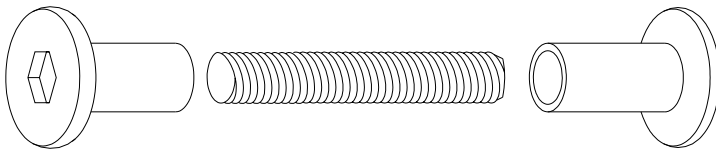


C. Fastening Screw Set



H. Lock Washer



I. Flat Washer



K. Shelf Support Pin



1840955

Richmond Computer Return

Assemble Spindle and Base

Parts required

A.	Top Assembly	1 pc	H.	Lock Washer	2 pcs
E.	Spindle	2 pcs	I.	Flat Washer	2 pcs
F.	Base	1 pc	L.	Allen Head Wrench	1 pc
G.	Long Allen Head Bolt	2 pcs			

1. **Attach Spindle (E)** Remove the keyboard tray from Top Assembly (A) and place Top Assembly (A) upside down on the floor, screw the Spindle (E) into the pre-threaded holes in the Top Assembly (A). See illustration #1.
2. **Attach Base (F)** Align the pre-drilled holes in the Base (F) with the pre-threaded holes in the Spindle (E). Secure with Long Allen Head Bolt (G), Lock Washer (H), and Flat Washer (I) using Allen Head Wrench (L). See illustration #1.

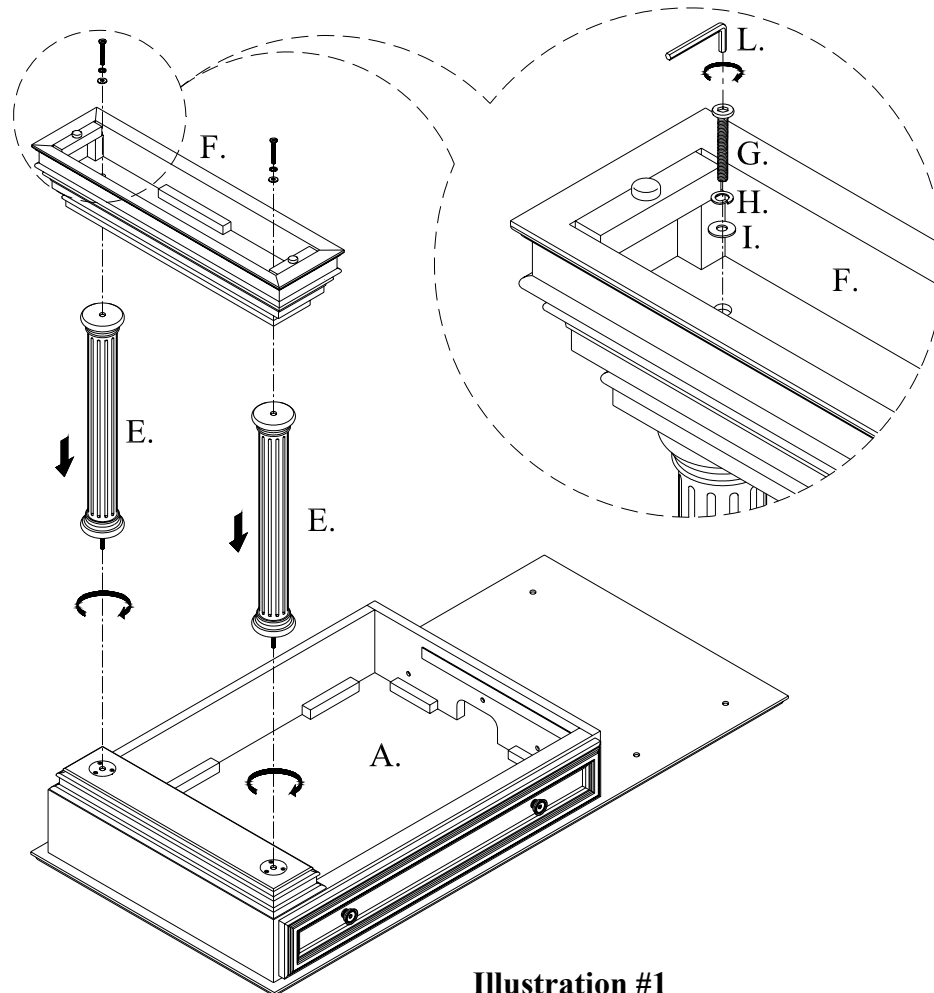


Illustration #1



1840955

Richmond Computer Return

Assemble CPU Cabinet to Top Assembly

Parts Required

B.	CPU Cabinet	1 pc	H.	Lock Washer	4 pcs
C.	Fastening Screw Set	3 sets	I.	Flat Washer	4 pcs
D.	Short Allen Head Bolt	4 pcs	L.	Allen Head Wrench	1 pc

3. **Attach CPU Cabinet (B)** Align the pre-drilled holes in the CPU Cabinet (B) with the pre-threaded holes in the underside of Top Assembly (A). Secure in place with Short Allen Head Bolts (D), Lock Washers (H), and Flat Washers (I) using Allen Head Wrench (L). **NOTE: Do not fully tighten bolts at this time.**
4. Align the pre-drilled holes in the side of CPU Cabinet (B) with the pre-drilled holes in the side of drawer of Top Assembly (A). Secure one of the caps to the threaded bolt of each Fastening Screw Set (C). Insert the cap-and-bolt of the Fastening Screw Set (C) through the pre-drilled holes and secure with the remaining cap of the Fastening Screw Set (C) from the other side using the Allen Head Wrench (L).
5. Fully tighten all Short Allen Head Bolts (D) and Fastening Screw Sets (C) at this time. See illustration #2.

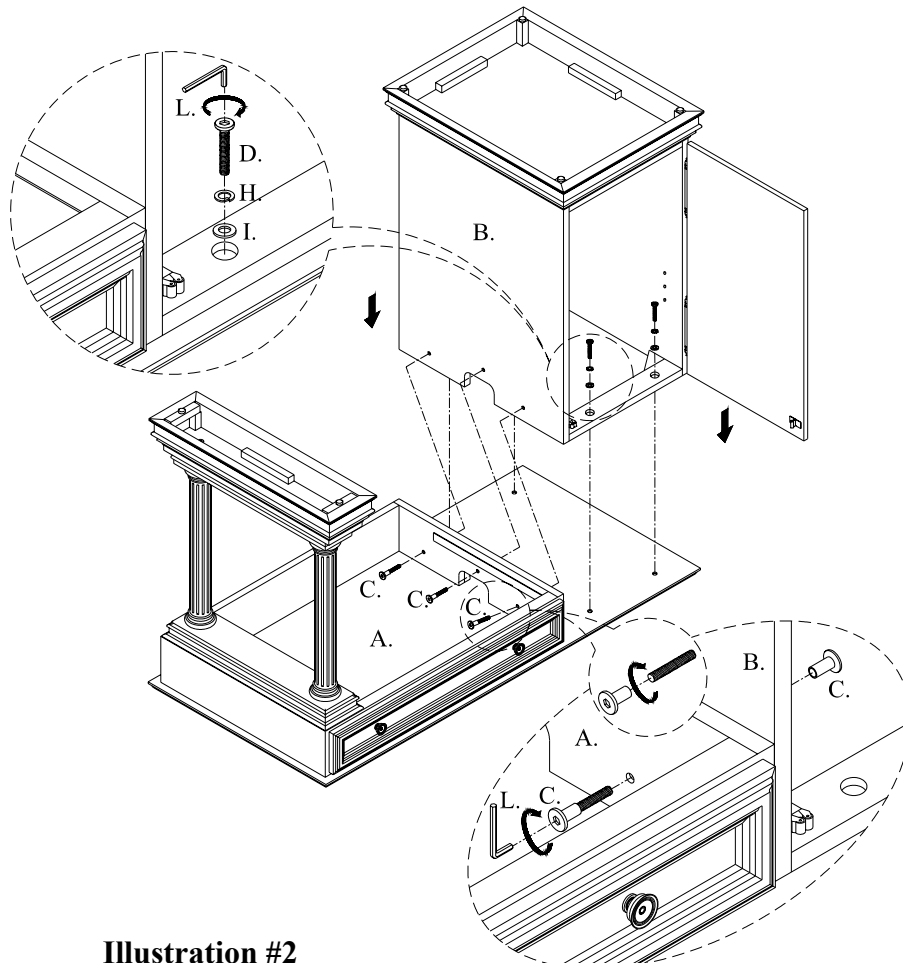


Illustration #2



1840955

Richmond Computer Return

Insert Adjustable Shelf into CPU Cabinet

Parts Required

J.	Adjustable Shelf	1 pc	K.	Shelf Support Pin	4 cps
----	------------------	------	----	-------------------	-------

- Carefully turn the Assembled Computer Return upright.
- Attach Adjustable Shelf (J)** Place the Shelf Support Pins (K) into the desired pre-drilled holes in CPU cabinet (B) and place the Adjustable Shelf (J) onto the Shelf Support Pin (K). Insert keyboard tray into the drawer slider in Top Assembly (A). See illustration #3.

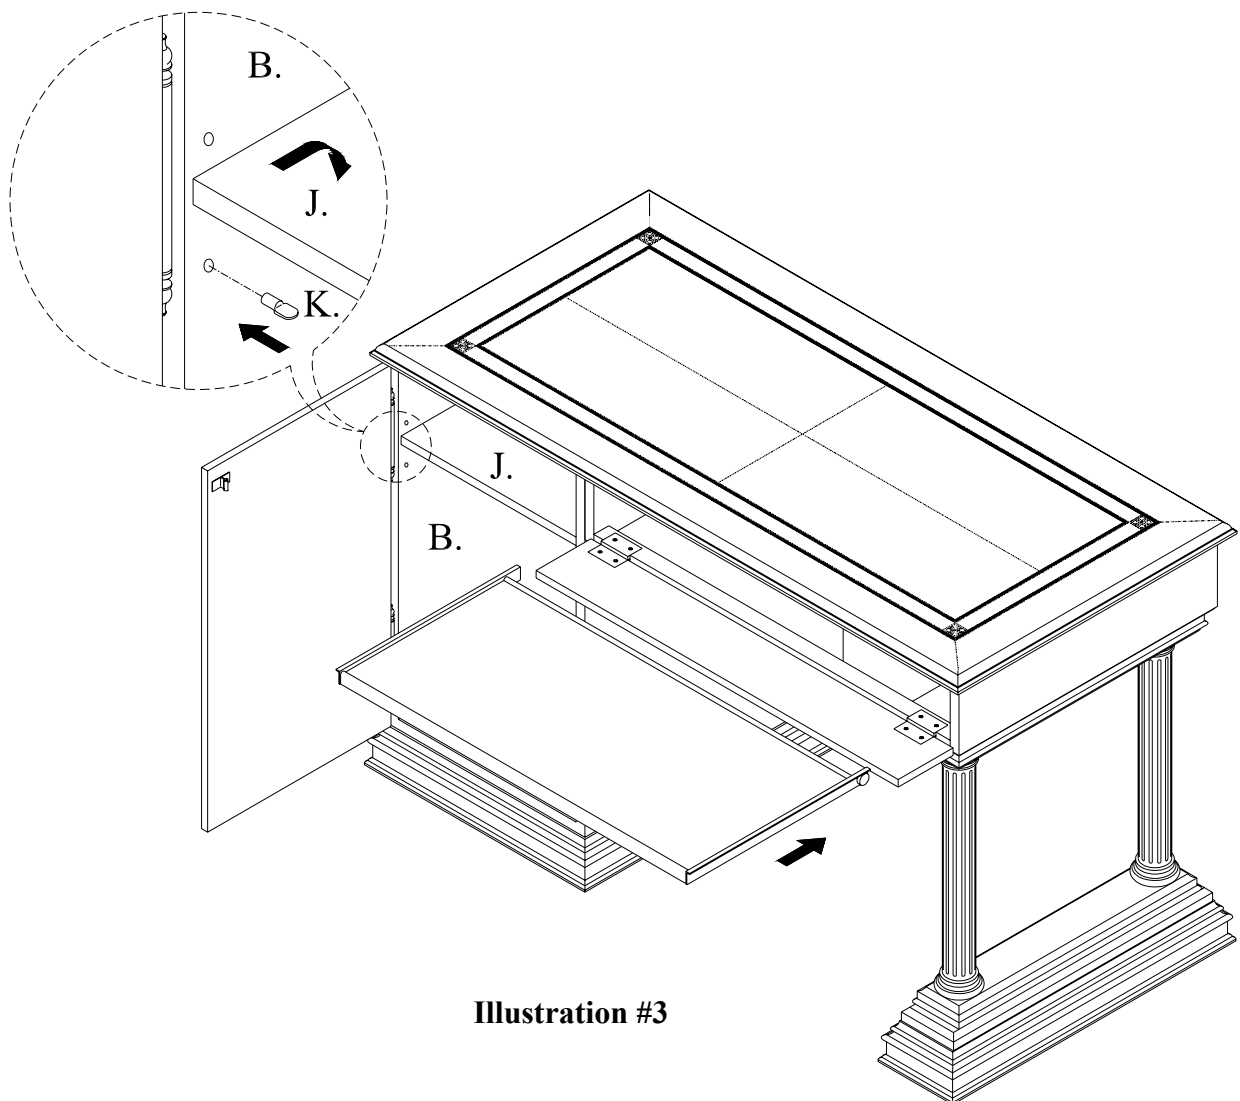


Illustration #3